
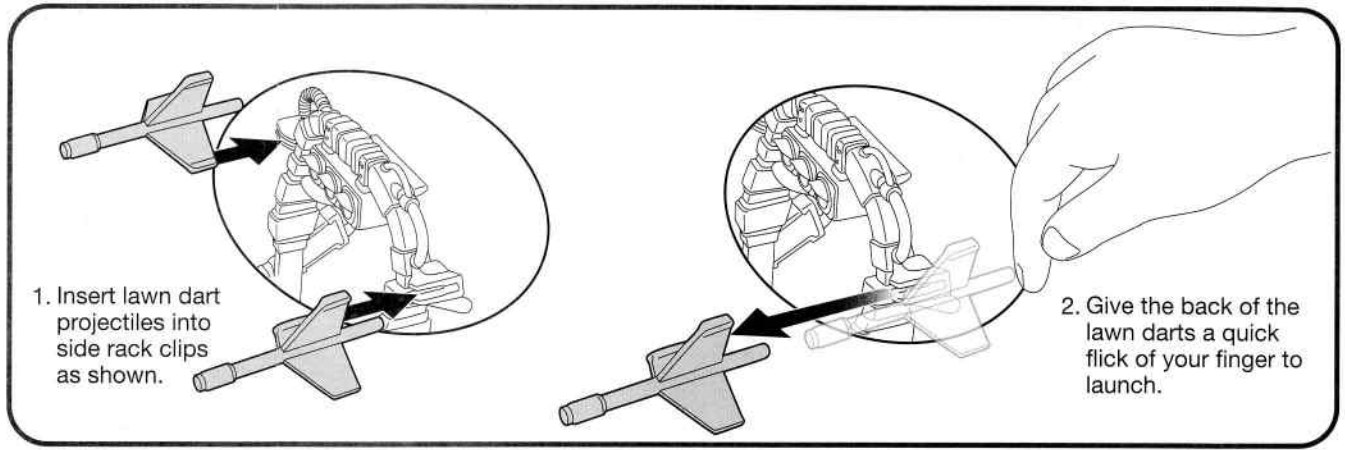


nickelodeon™
TEENAGE MUTANT NINJA
TURTLES™


GRASS KICKER

Attach parts as shown to assemble the Grass Kicker.
 Attach labels 1-5 as shown.

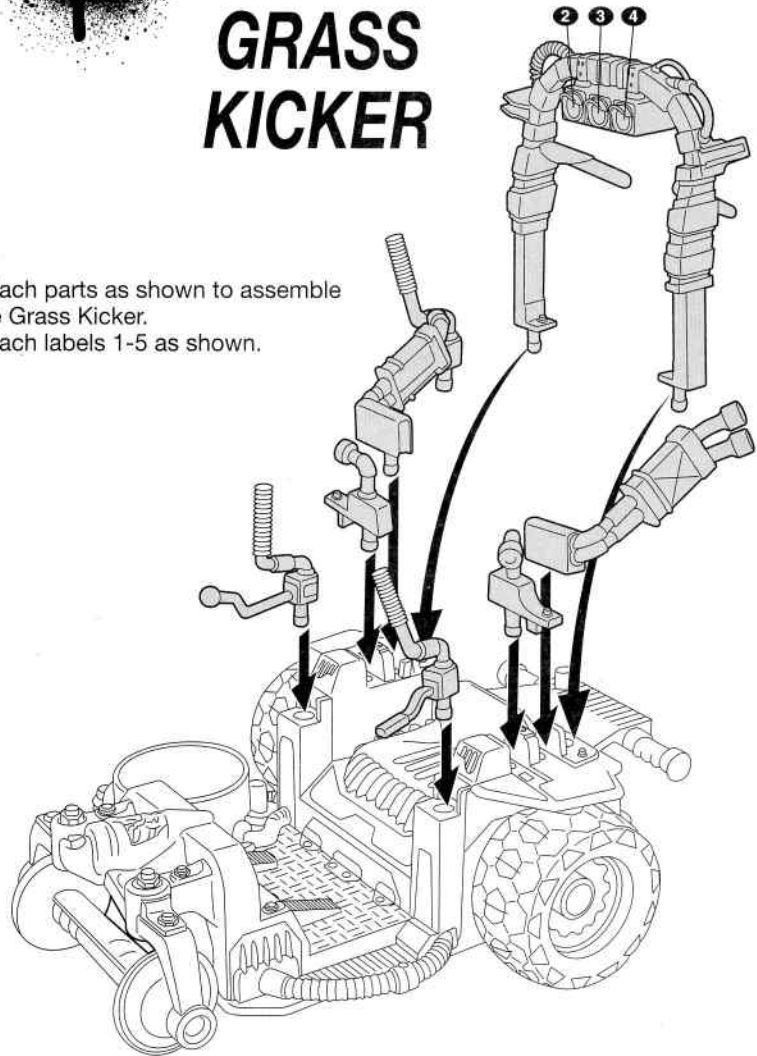


1. Insert lawn dart projectiles into side rack clips as shown.

2. Give the back of the lawn darts a quick flick of your finger to launch.

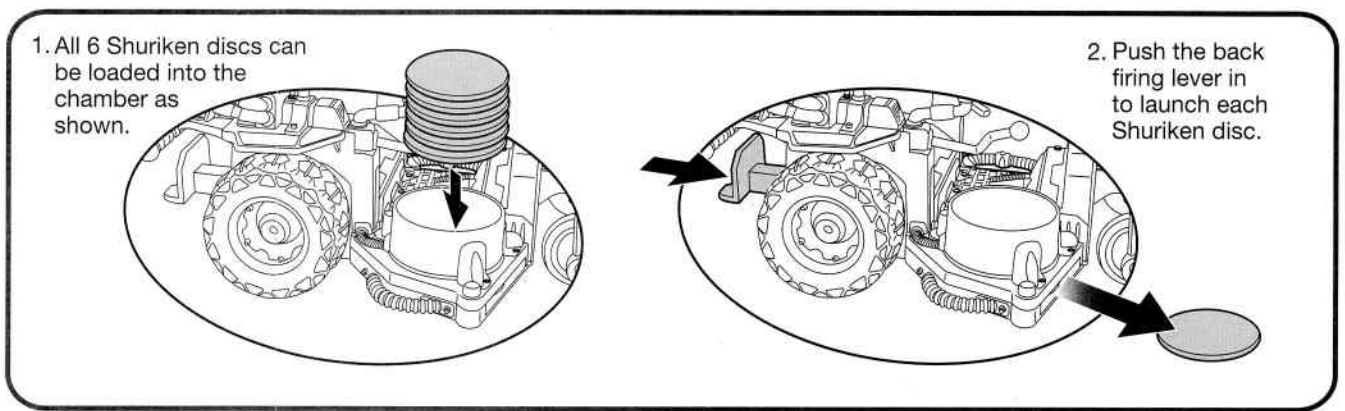

1. All 6 Shuriken discs can be loaded into the chamber as shown.

2. Push the back firing lever in to launch each Shuriken disc.

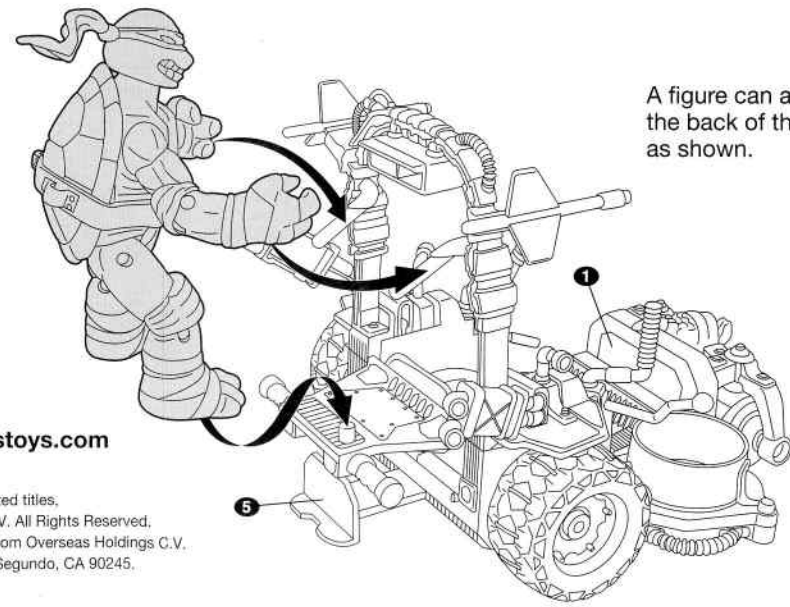

A figure can also be placed on the back of the Grass Kicker as shown.

Important: Do not fire at people, animals or at eyes or face.
 Do not use any projectiles other than those provided with this toy.

Ages 4 and up
 Asst. #94050
 Item #94056



For more detailed instruction information visit www.Playmatestoys.com
 Figure sold separately.

©2013 Viacom International Inc. All Rights Reserved. TEENAGE MUTANT NINJA TURTLES and all related titles, logos and characters are trademarks of Viacom International Inc. ©2013 Viacom Overseas Holdings C.V. All Rights Reserved. TEENAGE MUTANT NINJA TURTLES and all related titles, logos and characters are trademarks of Viacom Overseas Holdings C.V. © 2013 Playmates Toys Inc. Distributed by Playmates Toys Inc. 909 N. Sepulveda Blvd., Suite 800, El Segundo, CA 90245. PRINTED IN CHINA.

WARNING:
 CHOKING HAZARD- Small parts.
 Not for Children under 3 years.